

Care and Cleaning

PC Ultima

Dirt and Debris - Spray off your deck with a hose to remove surface debris periodically. Warm, soapy water with a soft bristle brush will get rid of dirt and debris from the embossed wood grain.

Ice and Snow - To melt snow and ice on your deck use calcium chloride or sodium chloride (salt). Any residue build up can easily be removed with water and a quick scrub. Only use a plastic snow shovel. Never use a metal shovel which may scratch the deck.

Food, Beverage, Oil, Grease Stains - Rinse the stain with hot water and soap as soon as possible. The longer the stain goes untouched, the more it will soak into the product making it less likely to be removed.

Mold & Mildew -Mold and mildew are common environmental conditions. When debris, (like pollen and dirt), is allowed to stay on the deck surface, it provides food for airborne mold spores. The best prevention is the periodic cleaning of your deck to remove dirt and pollen and other debris that provide food sources for mold. Periodic cleaning can be done by simply rinsing the deck, use a soft bristle brush to loosen dirt and rinse again.

PC Advantage / PC Xtreme

Dirt and Debris - Periodic cleaning of your deck and rail will aid in its overall appearance for years to come. Lose debris can be swept or blown off and to clean your deck simply rinse the deck, use a soft bristle brush to loosen dirt and rinse again. If you would like to use soap, general exterior house cleaners can be used (make sure to follow manufacturer's application instructions).

Ice and Snow - To melt snow and ice on your deck use calcium chloride or sodium chloride (salt). Any residue build up can easily be removed with water and a quick scrub. Only use a plastic snow shovel. Never use a metal shovel which may scratch the deck.

Rust Stains, Ground-In Dirt and Grime - Cleaning products containing oxalic or phosphoric acid base, (also known as Deck Brightener) may lighten or remove the rust or dirt. Check manufactures recommendations on how long product may need to sit on stain before rinsing.

Food, Beverage, Oil, Grease Stains - Rinse the stain with hot water and soap as soon as possible. The longer the stain goes untouched, the more it will soak into the product making it less likely to be removed.

Mold & Mildew -Mold and mildew are common environmental conditions. When debris, (like pollen and dirt), is allowed to stay on the deck surface, it provides food for airborne mold spores. The best prevention is the periodic cleaning of your deck to remove dirt and pollen and other debris that provide food sources for mold. Periodic cleaning can be done by simply rinsing the deck, use a soft bristle brush to loosen dirt and rinse again. For more intense cleaning, conventional deck washes or cleaners that contain sodium hypochlorite (bleach) and detergent are best.